

how to maintain your uk lottery machine

a guide to make the most
out of your investment




[MORE RESOURCES ON OUR WEBSITE](#)

what we recommend:

We will not be responsible for those damaged goods resulted from improper use.




- glass cleaner and optifibre glass cloth
- detailing polish and premium microfibre detailing cloth
- scratch remover polish and microfibre polish pad
- dusting brush set

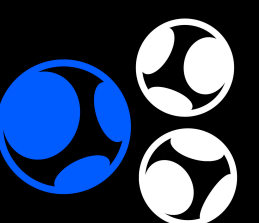


do not forget:

- wipe down after each draw.
- use the optifibre cleaning cloth acrylic spray.
- switch it off and cover the machine when not in use.
- keep an eye on the temperature of the room where its being stored and used.
- do not use ammonia-based cleaners – they will damage the surface of the machine.
- yearly mot for £99.95
contact us for more info.

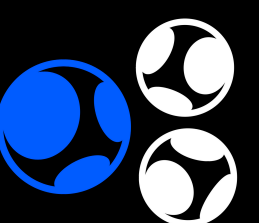

step by step:

1. uncover the machine (if covered with protective blanket).
2. make sure the machine is off and unplugged.
3. remove the lottery balls from the chamber via the loading funnel located on the rear chamber of the machine.
4. dust off the surface of the machine using the recommended brush set.
5. gently use the detailing polish and premium microfibre cloth to remove any possible stains from the display table.
6. using the glass cleaner and optifibre glass cloth, clean the chamber and display chute.

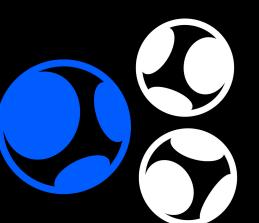

7. in the case of scratches, use the remover polish and microfibre polish pad to make sure they are as unnoticeable as possible.


8. when you are happy with the state of the machine, make sure you plug it and cover it again to avoid dust and further deterioration.



also:

the front panel of the machine is removable to allow access for easy cleaning and to remove the drum completely.

this is achieved by unscrewing the screws holding the front panel to the chamber supports.

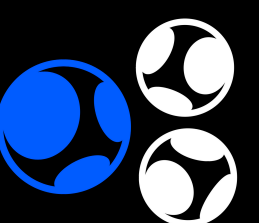

need any
extra help?

contact us

INFO@LOTTERYMACHINES.CO.UK

WWW.LOTTERYMACHINES.CO.UK